

# Changing Phone Settings

---

You can personalize your Cisco Unified IP Phone by adjusting the ring tone, background image, and other settings.

## Customizing Rings and Message Indicators

You can customize how your phone indicates an incoming call and a new voice mail message. You can also adjust the ringer volume for your phone.

If you want to...	Then...
Change the ring tone per line	<ol style="list-style-type: none"><li>1. Choose  &gt; User Preferences &gt; Rings.</li><li>2. Choose a phone line or the default ring setting.</li><li>3. Choose a ring tone to play a sample of it.</li><li>4. Press Select and Save to set the ring tone, or press Cancel.</li></ol>
Adjust the volume level for the phone ringer	<p>Press  while the handset is in the cradle and the headset and speakerphone buttons are off. The new ringer volume is saved automatically.</p> <p><b>Note</b> Check with your system administrator to see if a minimum ringer-volume setting was configured.</p>
Change the ring pattern per line (flash-only, ring once, beep-only, etc.)	<ol style="list-style-type: none"><li>1. Log in to your Cisco Unified CM User Options web pages. (See <a href="#">Accessing Your User Options Web Pages, page 63.</a>)</li><li>2. Access your call ring pattern settings. (See <a href="#">Controlling Line Settings on the Web, page 70.</a>)</li></ol> <p><b>Note</b> Before you can access this setting, your system administrator may need to enable it for you.</p>
Change the way the audible voice message indicator sounds on your phone	<ol style="list-style-type: none"><li>1. Log in to your User Options web pages. (See <a href="#">Accessing Your User Options Web Pages, page 63.</a>)</li><li>2. Access your message indicator settings. (See <a href="#">Controlling Line Settings on the Web, page 70.</a>)</li></ol>
Change the way that the voice message light on your handset works	<ol style="list-style-type: none"><li>1. Log in to your User Options web pages. (See <a href="#">Accessing Your User Options Web Pages, page 63.</a>)</li><li>2. Access your message indicator settings. (See <a href="#">Controlling Line Settings on the Web, page 70.</a>)</li></ol> <p><b>Note</b> Typically, the default system policy is to indicate a new voice message by displaying a steady light on the handset light strip.</p>

**Tip**

You can customize your phone to have up to six distinctive ring tones. In addition, you can have a default ring tone.

## Customizing the Phone Screen

You can adjust the characteristics of your phone screen.

If you want to...	Then...
Change the phone screen contrast	<ol style="list-style-type: none"><li>1. Choose  &gt; User Preferences &gt; Contrast.</li><li>2. To make adjustments, press Up, Down or .</li><li>3. Press Save, or press Cancel.</li></ol> <p><b>Note</b> If you accidentally save a very light or very dark contrast and cannot see the phone screen display, see <a href="#">Troubleshooting Your Phone, page 78</a>.</p>
Change the background image	<ol style="list-style-type: none"><li>1. Choose  &gt; User Preferences &gt; Background Images.</li><li>2. Scroll through available images and press Select to choose an image.</li><li>3. Press Preview to see a larger view of the background image.</li><li>4. Press Exit to return to the selection menu.</li><li>5. Press Save to accept the image or press Cancel.</li></ol> <p><b>Note</b> If you do not see a selection of images, then this option has not been enabled on your system.</p>
Change the language on your screen	<ol style="list-style-type: none"><li>1. Log in to your User Options web pages. (See <a href="#">Accessing Your User Options Web Pages, page 63</a>.)</li><li>2. Access your user settings. (See <a href="#">Controlling User Settings on the Web, page 69</a>.)</li></ol>
Change the line text label	<ol style="list-style-type: none"><li>1. Log in to your User Options web pages. (See <a href="#">Accessing Your User Options Web Pages, page 63</a>.)</li><li>2. Access your line label settings. (See <a href="#">Controlling Line Settings on the Web, page 70</a>.)</li></ol>